



**MEEK MIRRORS, LLC**  
 PO Box 11200  
 Fort Smith, Arkansas 72917-1200  
 800-643-2533 Fax 479-646-6231  
[www.meekmirrors.com](http://www.meekmirrors.com)


**Installation  
 Instructions**

TRI-VIEW FRAMED MIRROR	DATE 1/2022	MODEL M4500 M4510 M4600 M4610	SHEET NO. 3-00
------------------------	----------------	-------------------------------------	-------------------

## Installation Instructions

- 1) Disassemble frame from center back plate.
- 2) Mount center back plate to the wall using screw holes closest to the roll formed edge. Make sure the back plate is level and square.
- 3) Position mirror on the bottom edge of the back plate with mirror resting on the roll formed flange and hold in place. Make sure the mirror is firmly in the frame.
- 4) Starting at the bottom of the frame, place the frame over the edge of the back plate. Start to snap the frame onto the back plate working toward the corners. Then continue up the sides and across the top until the frame snaps in place.
- 5) Remove screws from wings and remove the stainless steel angle pieces (A) from the back of the wings. Remove the one piece of paneling and three pieces of cardboard (B) and set aside.
- 6) Install the glass face to front, install the three pieces of cardboard and paneling face out to back.
- 7) Replace angle pieces and replace screws.

Product made in the USA.

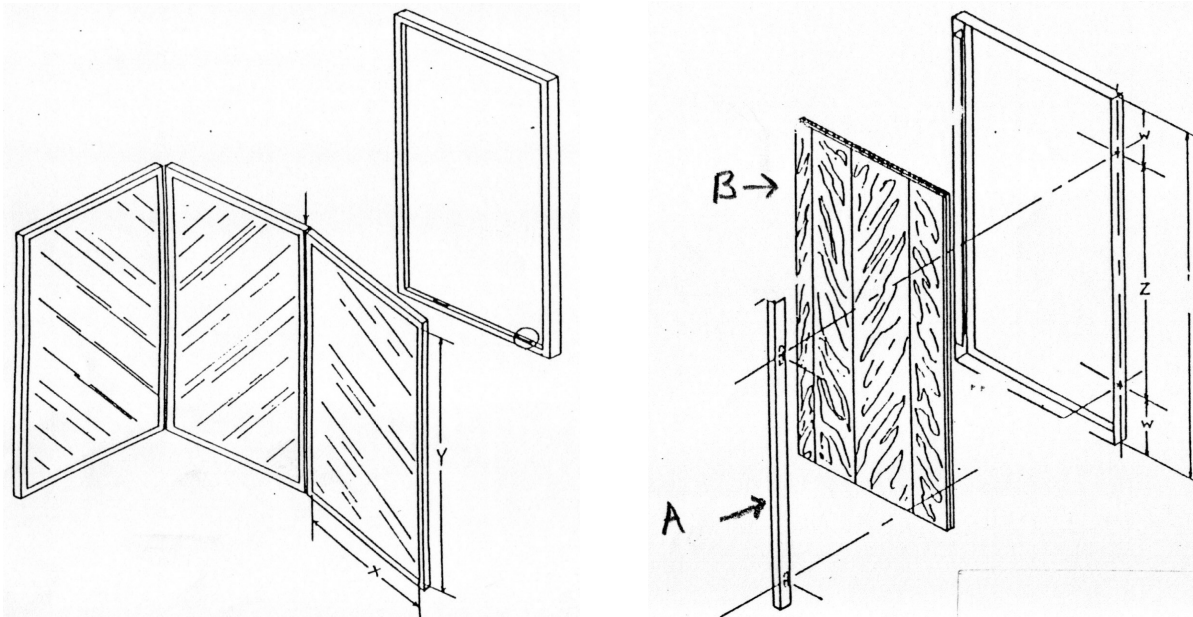

W,X,Y,Z — Variable Dimensions

Lugs and hinge mounting screws vary in quantity with above dimensions.