

Figure 1—The Wall

- 1) For best results, always try to install into one or more wall studs. When no stud is available, **ALWAYS** use provided white wall anchors (Part#431W).
- 2) On the wall, at the appropriate height, install the second metal cleat with the provided #8x1-1/2" screws (Part#SM815).
- 3) Hang the frame by interlocking the cleats as shown in figure 2 (below). If needed, you can adjust the level of the frame by using the elongated holes on the cleat.

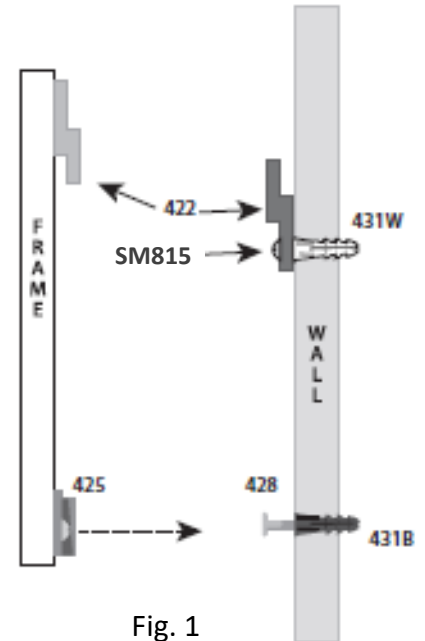


Fig. 1

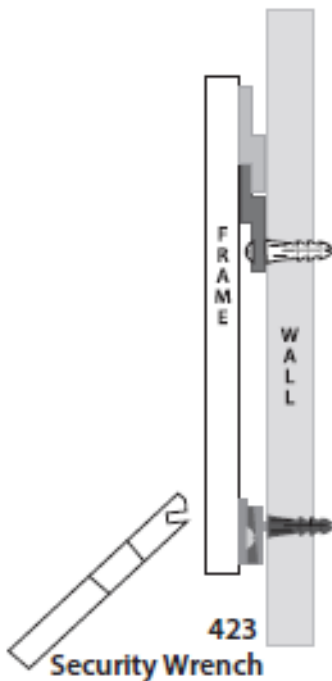


Fig. 2

Figure 2—Theft Resistant Installation Only

- 1) Follow the same steps as above. Once level, using a pencil, lightly trace the bottom edge of the #425 bracket on the wall.
- 2) Gently remove frame from wall. Using the center of the pencil line, measure up 5/16th of an inch and mark the wall. This should correspond to the center opening of the bracket, where it will rest on the wall.
- 3) At the mark from above, install the blue anchor (Part#431B) and T-screw (Part#428). Leave the T-screw head approximately 3/8th of an inch off the wall in a horizontal position.
- 4) Place the frame back on wall ensuring that the T-screw fit into the bracket (Part#425); adjust depth if needed. Using the supplied wrench (Part#423), insert the wrench behind the frame and turn the T-screw 90 degrees. The frame should now be locked onto the wall.