


Angle Framed Mirror MODEL M1200 SERIES

REVISION 07/2025

Installation Sheet 6201 S. Zero Street Fort Smith, AR 72903 www.meekmirrors.com

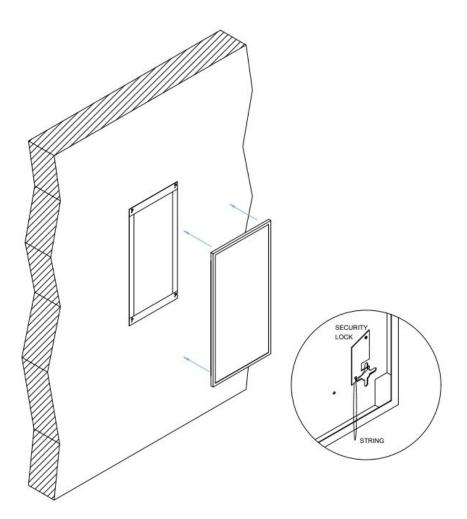

INSTALLATION:

- 1) Install wall hanger on the wall. Fasten all four corners using the pre-drilled holes. Recheck to make sure wall hanger is square and level.
- 2) Center framed mirror over the wall hanger. Slide the mirror completely down on the lugs. Check all four corners to ensure they are fastened to the wall hanger.
- 3) Pull string towards the right hand corner to engage the security lock. After the final inspection, cut and remove string.
- 4) To remove the mirror, insert putty knife at the bottom right side and push security lock to the left. Lift up and remove.

Product made in the USA.

Copyright 2025 Meek Mirrors LLC, All Rights Reserved.

All text, images and other materials contained or displayed here are proprietary and constitutes valuable intellectual property belonging to Meek Mirrors. No materials from any part of this document are authorized or intended by us to be reproduced or in any other way used or otherwise disseminated in any form to any person or entity, unless said person or entity has a license or authorization from us to do so. All unauthorized duplication or any other use of these materials shall constitute intentional infringement of our intellectual property and shall further constitute a violation of our trademark, copyright, and other rights.



REVISIONS: Dimensions and/or specifications are subject to change without notice. We can assume no responsibility for the use of superseded or void DATA.

